

User manual

CHOCOLINO

CAFÉLINO



Your retail dealer

.....
.....

U / EN

Rev. 111121

1. Contents.

1.	Contents	sid.	2
2.	General		3
3.	Component overview, front		4
3.	Component overview, inside machine		5
3.	Component overview, function buttons		6
4.	SERVICE; Installation and Start-up		
	Position machine		7
	Hook up water to machine		7
	Start machine		7
	Fill concentrate in container		8
5.	OPERATION		
	Dispensing drink into cup		9
6.	CLEANING		
	Every day		
	Cleaning of entire mixer system		10
	CLEANING		
	Remove mixer system		11
	Wash parts		11
	Re-install mixer system		11
7.	Recipe PROGRAMMING		
	Using the pin code, adjust value of drinks		12 - 16
8.	Reset Cup counter		17
9.	Storage and transportation		18
10.	Dimension sketch		19
11.	Cleaning and care		20
12.	Safety Regulations		21

Thank you for choosing a Chocolino/Cafélino. We hope you enjoy it!

The machine must be connected correctly for your own safety.

Read the user guide before using the machine.

- The guide contains important instructions for proper and safe use of the machine.
- Always keep the guide close at hand.

Safety regulations

- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety
- Children should be supervised to ensure they do not play with the appliance
- The brewer must be connected to the water mains in accordance with any national rules that may apply.

Chocolino/Cafélino

- Makes single beverage servings
- 2 drink options
- 1 concentrate container
- Electronic temperature control
- Cleaning function inside panel.

Facts:

Height	454 mm
Width	175 mm
Depth	442 mm
Power supply	230V/2200W
Cold water hook-up	½" external thread for fitting factory-supplied tube

Temperatures;

The recommended room temperature when the machine operates 20-23 ° C
(maximum 15 - 35 ° C)



The programming features are located inside the machine

Touch panel

Tap for drink


Drip tray insert

Drip tray

Water hook-up

Connection of power cord

Service plug
Emptying of water tank

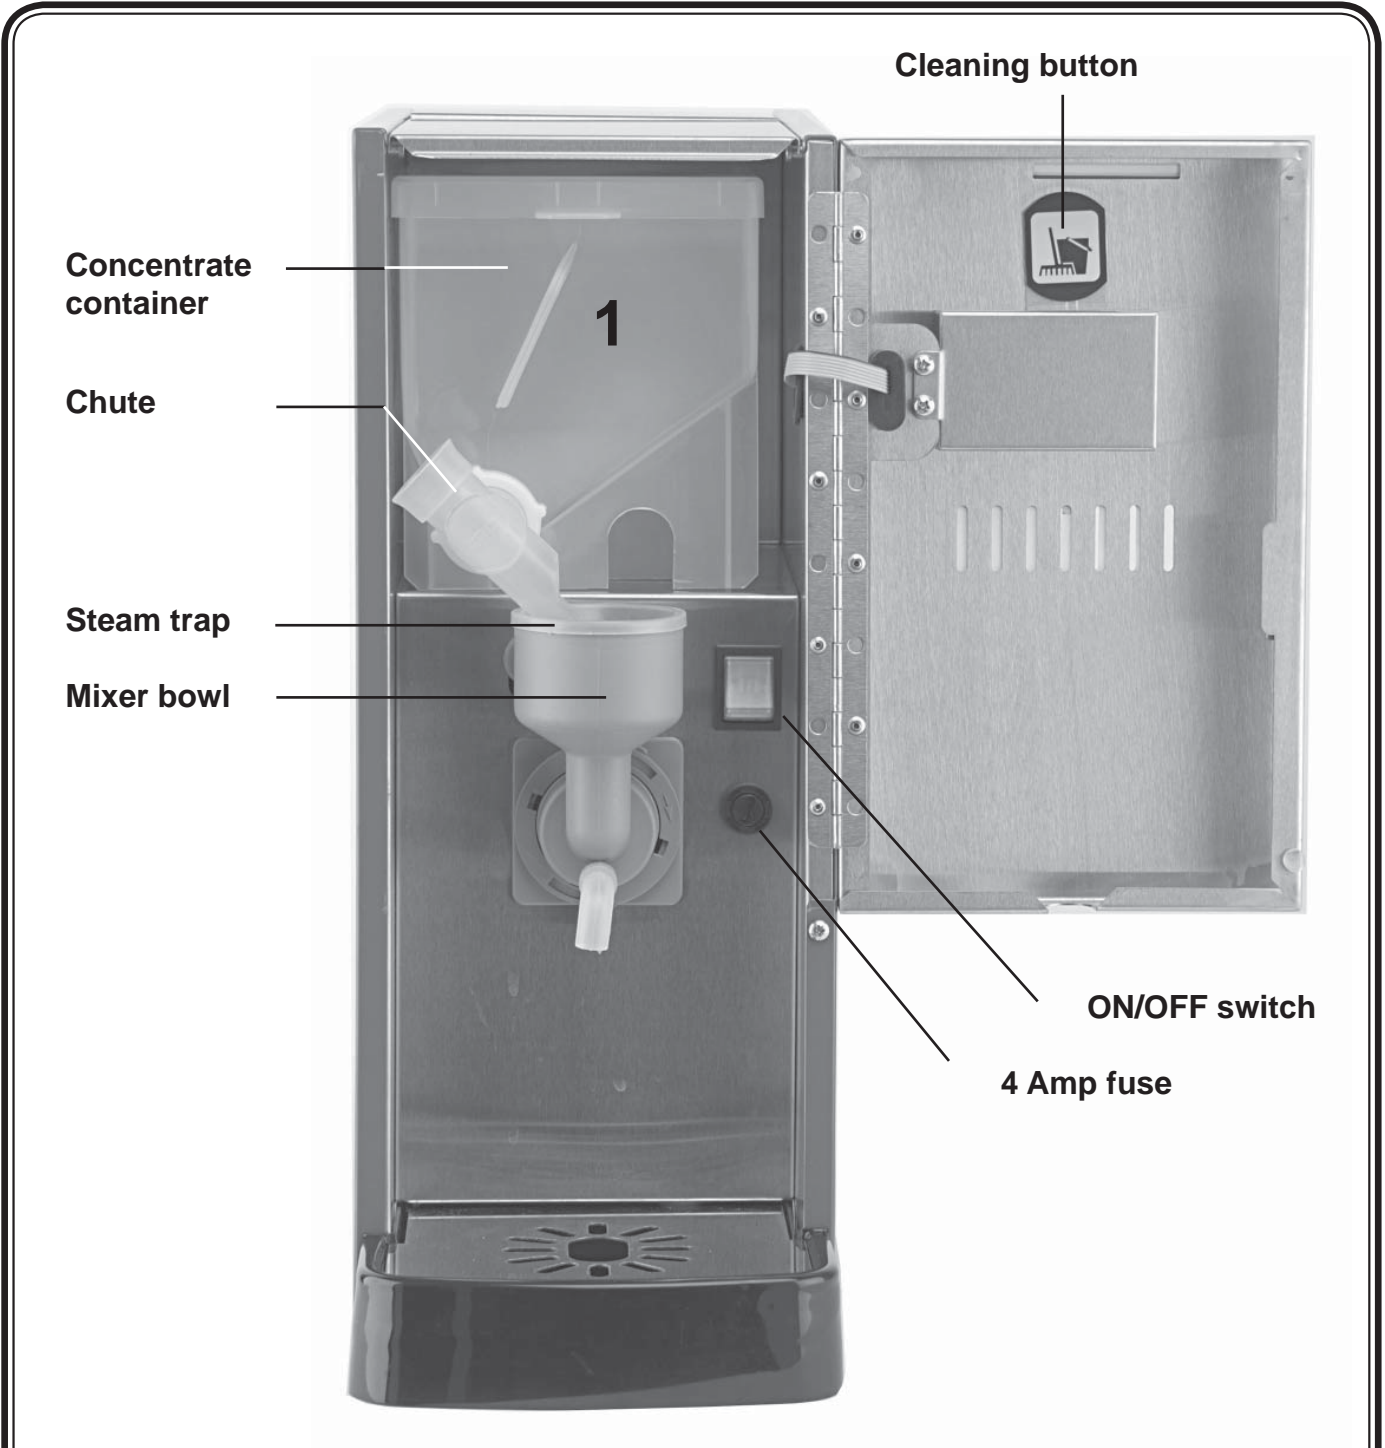


Container:	Width	Depth	Height	Chocolino	Cafélino
1	137	225	156	Chocolate	Coffee



1



2

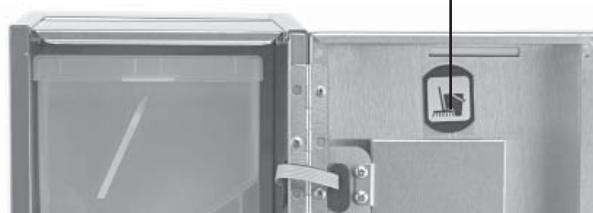

3



Function buttons

1. Standard cup
2. Large cup
3. Cleaning of mixer system
4. Ready lamp
 - The lamp lights constantly when the machine is ready.
 - The lamp blinks when a drink is being poured.

4



1. Place the machine on a flat waterproof surface.



Connect the plug to an **earthed 230V 10A wall outlet.**



Note: Make sure air is able to circulate freely behind the machine.

2. Connect the factory-supplied tube to the **cold water feed** using a ½" R- connection piece. Make sure no folding or sharp bending occurs when you push the machine back in place.
If the water pipeline is new, flush the system with water first to remove copper shavings. These can damage the inlet valve.

The new tube set supplied with the appliance must be used. Old tubes may not be reused. Connection to a closable valve is recommended.
Min. water pressure; 2 bar (200kPa). Max. water pressure: 8 bar (800kPa).

3. Open the water tap.
4. Hit the ON/OFF switch inside the panel.

The water tank will fill automatically with 1.8 litres of water.

The element will not be powered until the water reaches the level indicator.

The temperature is set to 85° Celsius.

5. Shut the panel door.



ON / OFF
switch

6. Fill concentrate into canister.

Remove the concentrate container to avoid spilling the concentrate in the machine) and fill with concentrate.

1. Twist the concentrate tube up out of the mixing bowl.
2. Lift the front edge of the concentrate container and pull out.
3. Lift the lid and fill with concentrate.

7. When placing the concentrate container

Make sure the chute is close to the condensation traps (A), as illustrated.



Dispensing drink into cup, Chocolate, etc.


1. **Centre a cup** on the drip tray.
2. **Select a drink** the lamp will flash.
3. Wait until the light stops flashing before removing the cup.



Rinsing the mixing system:

The mixing bowl can be cleaned easily using the cleaning button.


We recommend you clean/rinse the entire mixing system at least once a day.

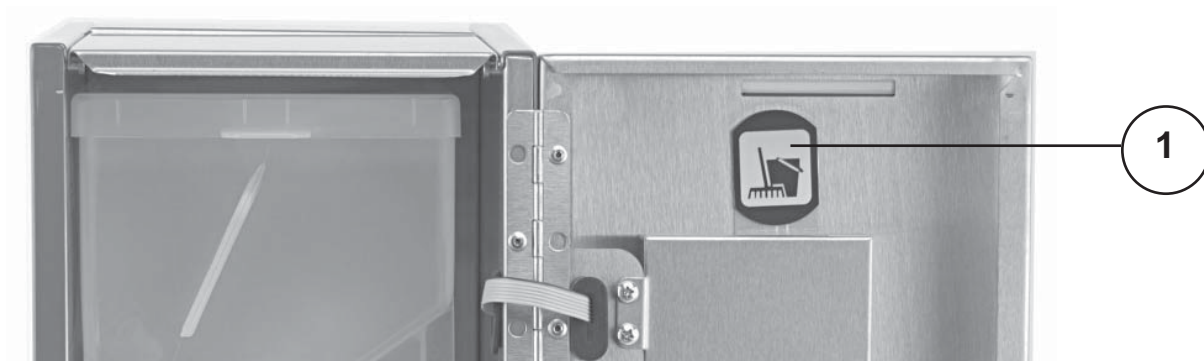


1. Centre a large cup on the drip tray.
2. Press the cleaning button (1)
3. The machine starts by tapping valves and then rinsing the mixer and mixer bowl.

6. CLEANING: Cleaning once a day


Disassemble blender system. Cleaning once a day.

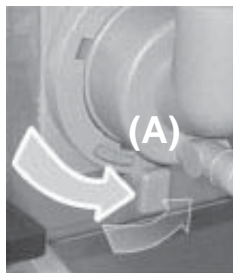


1. Turn the lever (A) counter clockwise.

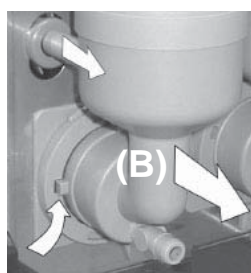

2. Loosen the blender cup. Pull straight out (B).

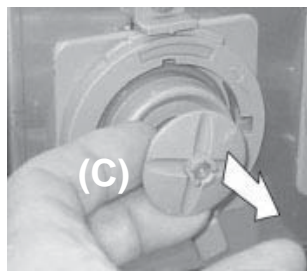


3. Loosen the mixer (C) by pulling it straight out.

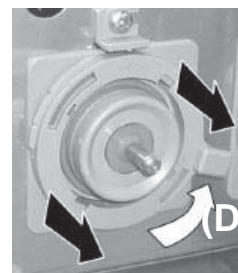

4. Loosen the mounting plate. Turn the lever counter clockwise (D) until it stops

5. Clean with a damp cloth and wipe dry.

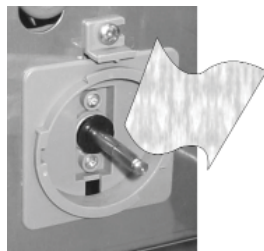

6. Wash these parts

A. Mixing bowl



B. Steam trap



C. Mixer




D. Mounting plate




Note: All parts must be dry before being remounted.

Reassemble the blender system.

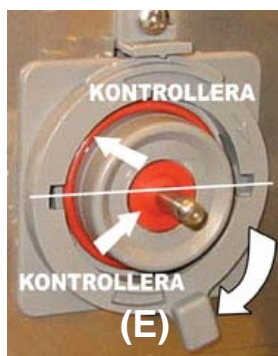


7. Replace the mounting plate by turning the lever (E) clockwise. **CHECK** the washers.

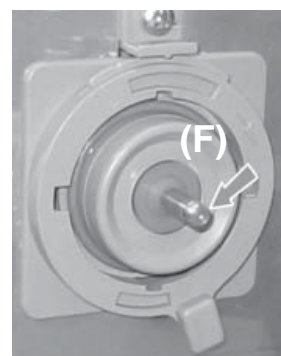

8. The level side of the mixer motor shaft should line up with the marking on the mixer (F).



9. Mount the mixer, and press until you hear a clicking sound. Follow the mixer's indicator, arrow (G). The mixer can only be mounted in this way.

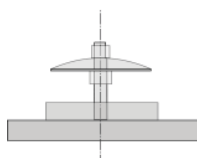

10. Press in the blender cup as shown (H) and lock with the lever (I).

11.

Recipe PROGRAMMING.

To open the menu, follow the instructions below. The pin code is 1000.

Remember to always confirm your selection by pressing button



1.

Press button



2.

Press button



until the display reads Recipes.

**Service mode:
Recipes**

3.

Press button



to open the menu. Display reads PIN code= IIII.

PIN code= IIII

4.

Press button



once, and the cursor jumps to the next number.

PIN code= IIII

5.

Press button



and the second number reads 0.

PIN code= I0II

6.

Confirm by pressing button



.

PROGRAMMING: using the pin code.

7. Press button  and the third number reads 0.

PIN code= 1000

8. Confirm by pressing button  .

9. Press button  and the fourth number reads 0.

PIN code= 1000

10. Confirm by pressing button  .

11. The display reads OK.



PIN code= 1000
PIN ok

12. The display now shows drink = 1

Select drink = 1

PROGRAMMING: adjust value of drinks

Select drink = 1

13. select a drink by pressing button  or button 


Select drink 1
Select drink 2
Select drink 3
Select drink 4

14. Press button  to select which drink to adjust



To set and adjust a recipe, see the table on page 15 - 16.

15. Press button  to open the menu. Display shows



Drink 1
start V1 Water 1

16. To change recipe values, Press button  Display shows.


Drink 1
start V1 W 1 =
0,0


17. Press button  or  to change recipe values

18. To confirm the new selection, press button. 

19. Press button  or  to go to a new recipe value.

Repeat step 16 - 18 to adjust.

20. To go back a level in the menu, press button 

21. To return to the operating level, press button  again.

22. Select a new drink and adjust recipe value.

PROGRAMMING: adjust recipe values, chocolate.

Adjust recipe values for drink 1

<i>Drink 1</i>	<i>Start 1</i>	<i>Stop 1</i>	<i>Start 2</i>	<i>Stop 2</i>
----------------	----------------	---------------	----------------	---------------

<i>Chocolate</i>				
------------------	--	--	--	--

<i>V1</i>	<i>0,0</i>	<i>4,7</i>	<i>7,7</i>	<i>8,0</i>
-----------	------------	------------	------------	------------

V2

<i>Ingred 1</i>	<i>0,0</i>	<i>3,7</i>
-----------------	------------	------------

Ingred 2

<i>Mixer 1</i>	<i>0,0</i>	<i>8,0</i>
----------------	------------	------------

Mixer 2

Adjust recipe values for drink 2

<i>Drink 2</i>	<i>Start 1</i>	<i>Stop 1</i>	<i>Start 2</i>	<i>Stop 2</i>
----------------	----------------	---------------	----------------	---------------

<i>large chocolate</i>				
------------------------	--	--	--	--

<i>V1</i>	<i>0,0</i>	<i>6,3</i>	<i>9,3</i>	<i>9,6</i>
-----------	------------	------------	------------	------------

V2

<i>Ingred 1</i>	<i>0,0</i>	<i>5,0</i>
-----------------	------------	------------

Ingred 2

<i>Mixer 1</i>	<i>0,0</i>	<i>9,6</i>
----------------	------------	------------

Mixer 2

PROGRAMMING: adjust recipe values, coffee.

Adjust recipe values for drink 1

Drink 1 Start 1 Stop 1 Start 2 Stop 2

Coffee

V1 0,0 4,6 7,0 7,2

V2

Ingred 1 0,2 1,4

Ingred 2

Mixer 1

Mixer 2

Adjust recipe values for drink 2

Drink 2 Start 1 Stop 1 Start 2 Stop 2

Espresso

V1 0,0 2,8 3,8 4,1

V2

Ingred 1 0,1 1,1


Ingred 2




Mixer 1 0,0 4,0

Mixer 2

Cup counter:

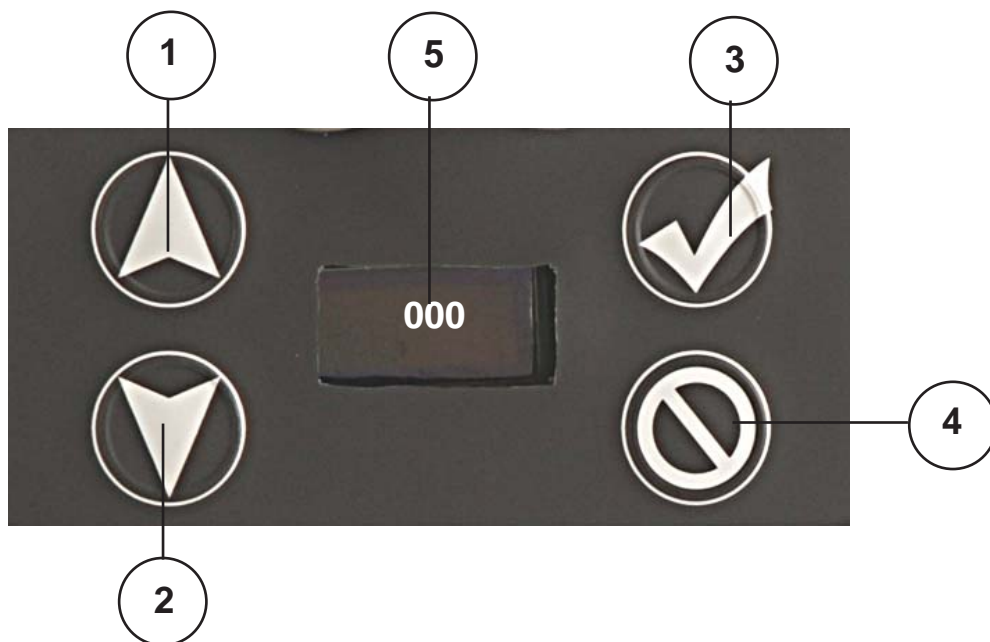The machine has a built-in Cup Counter that can be reset.



1. Loosen the left side of the machine. The display (5) shows 000 cups.
2. To reset the counter: Press button  to setting Reset Counters.
3. Press button  to reset the counter.
4. Confirm the new setting by pressing button  .

Long-term storage and transportation

1. Switch off the machine, unplug it and close the water tap.
2. The machine must not be stored in freezing temperatures, and all water must be removed before long-term storage.



Emptying the water tank.

1. Switch off the machine and allow it to stand approx. one hour before emptying the water.
Note: Remember that the water is very hot while the machine is in operation.
2. Loosen the water hook-up (1) and unplug the power cord (2).

Water hook-up (1)

Power connection (2)

Service plug (3)
Emptying of water tank

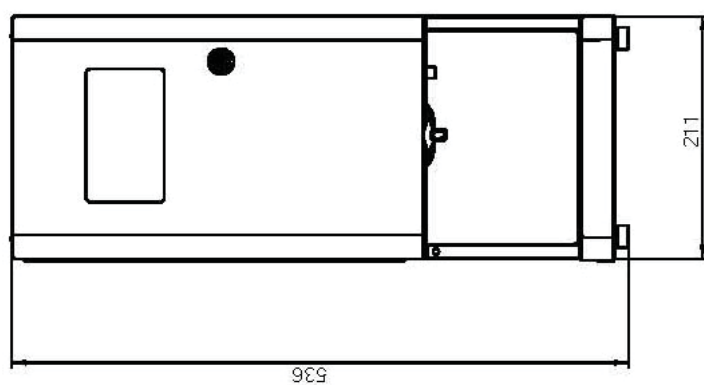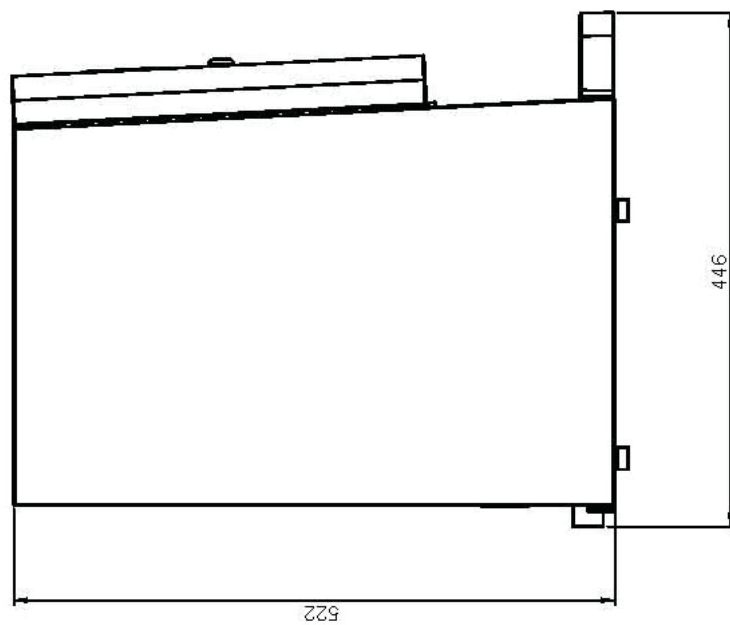

To clean the outside of the machine, use a soft cloth and a non-abrasive liquid detergent.



"This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety"

"Children should be supervised to ensure that they do not play with the appliance"

"Note that national rules regarding the connection of this appliance to the water supply may apply"

"The appliance should only be serviced by a person having knowledge and practical experience of the appliance particularly as far as safety and hygiene are concerned"

"The new hose-sets supplied with the appliance are to be used, old hose-sets should not be reused"

"The appliance should not be installed where a water jet could be used and a water jet must not be used to clean the appliance"



FOR SERVICE

Please contact your dealer

<p>Your dealer</p> <p>.....</p> <p>.....</p> <p>.....</p>

CREM International AB

Box 960, 671 29 ARVIKA, Sweden

Tel: +46 (0)570-477 00, Fax: +46 (0)570-47719

E-mail: info.se@creminternational.com www.creminternational.com

Art.nr. 1730051-02