

QUARTZ CLASSIC

USER MANUAL



CONTENT	2
SYMBOL DESCRIPTION	4
Hazard intensity levels	4
GENERAL.....	5
Introduction	5
General instructions.....	5
Warnings.....	5
Precautions.....	6
Intended use.....	6
Data sheet.....	7
OVERVIEW OF COMPONENTS.....	8
Front view.....	8
DIMENSION SKETCH.....	9
Quartz Classic	9
TRANSPORT	10
INSTALLATION AND START-UP.....	10
Packaging.....	10
Delivery inspection	10
Positioning.....	10
Electrical connection.....	11
Water connection.....	11
Pressure and temperature	11
Drip tray drainage.....	12
Starting the machine.....	13
OPERATION	14
How to dispense a drink.....	14
Steaming and frothing milk.....	15
Dispensing hot water	15
Filling the water tank	16

CLEANING AND CARE..... 17

Coffee machine cleaning..... 17

Daily cleaning procedures..... 17

Weekly cleaning procedures..... 17

Rinsing the capsule group..... 18

Cleaning the capsule group..... 19

Cleaning the coffee spout..... 20

Emptying the capsule drawer..... 20

Additional handling of the machine..... 21

PROGRAMMING..... 22

Keypad..... 22

Programming the drink volume..... 22

STANDBY mode..... 22

STORAGE AND DISPOSAL..... 23

Storing the machine..... 23

Disposal of the machine..... 23

TROUBLESHOOTING..... 24

ALARMS AND INDICATIONS..... 25

Hazard intensity levels

There are three different levels of hazard intensity, identified by the signal words DANGER, WARNING and IMPORTANT. The level of hazard is determined by the following definitions.

Additionally, NOTE indicates useful information that all users should be aware of.

Observe these statements to ensure user safety and prevent injury and/or material damage.



Important:

Alerts against unsafe practices. Observe to ensure food safety, to prevent minor personal injury, or damage to the machine.



WARNING:

Indicates a potentially hazardous situation which, if not avoided, could result in serious injury and even death.



DANGER:

INDICATES AN IMMINENTLY HAZARDOUS SITUATION WHICH, IF NOT AVOIDED, WILL RESULT IN SERIOUS INJURY OR EVEN DEATH.



Note:

Provides additional information which may be helpful during cleaning or operation of the machine.

Introduction

Thank you for choosing the QUARTZ CLASSIC espresso machine.
We hope you enjoy it !

- Read this user manual carefully before starting to use the machine.
- This manual contains important instructions regarding safe intended use of the machine.
- Do not discard this manual, it will be useful for future reference. If damaged or lost, request a copy from the manufacturer.

General instructions

- Machine installation and certain maintenance operations should only be performed by qualified service personnel.
- All safety instructions and warnings contained in this manual should be observed at all times to ensure safe installation, use, and maintenance.
- Do not attempt to remove covers or safety shields to access the interior of this machine or make repairs. Repairs should be made by an authorised technician or service centre.
- Owners are liable for ensuring that users have been properly trained to operate the machine and understand the potential risks involved.
- The owner or installer will be liable for all unauthorised modification of the machine.
- Unauthorised alteration or modification of the machine will immediately void the manufacturer's warranty.
- This manual references the machine at the time of sale. The commercial availability of subsequent versions including modifications, upgrades or adaptations does not oblige the manufacturer to apply any changes to this machine, nor is it obliged to update the documentation supplied.
- The manufacturer reserves the right to withdraw currently available manuals whenever deemed appropriate and reasonable.
- Periodically, some updates and changes may be required for this machine. In this event, a technician will be responsible for ensuring the change is made in accord with manufacturer's specifications.

Warnings

Note: The manufacturer is not liable for damage to persons or property resulting from failure to follow the instructions and warnings listed below when installing and using this machine.

- Install the machine in a horizontal position and away from heat sources and flammable objects.
- This machine should only be installed on a water-resistant work surface that is capable of adequately supporting the machine's weight.
- Place the machine in a location accessible only to personnel trained to operate it.
- Keep all hazardous packaging materials, such as plastic bags, styrofoam, and staples, out of reach of children.
- Plug the machine into a properly installed, earth grounded electrical outlet with line voltage that matches the specifications for the machine.
- Ensure that the power supply voltage does not fluctuate by more than 6%.
- Position the power cable so that users cannot trip over it. Keep the power cable away from sharp edges and heat sources.
- Children should never be allowed to play with the machine.
- This appliance is not suitable for installation in an area where a pressure washer may be used.
- Do not use the machine outdoors, where it would be exposed to severe weather or extreme temperatures.
- If the power cable is damaged, it may only be replaced by the manufacturer or its approved service technician.
- Do not remove or disable any of the mechanical, electrical, or thermal protection safety equipment.

- In case of emergency, (e.g., the machine catches fire or becomes unusually hot or noisy), disconnect the power immediately and turn off the water supply.
- If the machine is not going to be used for an extended period of time, disconnect the power. When disconnecting the power, pull the plug rather than the cable.
- When packed for storage, store the machine in a dry place with an ambient temperature above 5°C. Boxes may be stacked up to three units high of the same model. Do not place other heavy items on top of the box.
- If the machine is likely to be exposed to temperatures below 0°C during handling and transport, make sure that service personnel empties the boiler and water system. (The machine's boiler and water system is empty when delivered from the factory.)
- To ensure fault-free machine operation, only use manufacturer-approved replacement parts and accessories.

Precautions

- Before performing maintenance and/or moving the machine, disconnect the machine from the power supply and wait for it to cool down.
- Do not place any liquids on the machine.
- This appliance must not be cleaned with a pressure washer.
- Never immerse the machine, plug or power cable in water, as there is a risk of electric shock.
- Do not touch the machine's hot surfaces or dispensing equipment.
- Do not touch the machine if your hands or feet are wet.
- Do not operate the machine if any part except the dispensing equipment is wet.
- Place the machine out of reach of children.
- This appliance can be used by children age 8 and above and persons with reduced physical, sensory, or mental capabilities or with lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Do not use the machine if the power cable or plug is damaged, or the machine has been dropped. Contact a service technician for repairs or to ensure that it is safe for use.
- Do not block the vents with rags or other objects.
- Do not insert foreign objects into the vents.
- Check the drain regularly to make sure that waste water is emptying properly.



Intended use

- The coffee machine has been designed and manufactured to make espresso coffee and other hot drinks (e.g., steaming and frothing milk). Do not use it for any other purpose.
- The machine is intended to be used by trained personnel for preparing foodstuffs.
- This machine is not intended for use in industrial kitchens, domestic kitchens, or similar locations.
- The manufacturer will not be held liable for damage to persons or property due to incorrect, improper or negligent use by non-professional personnel.
- To ensure optimal performance, install the machine in a location where these parameters will not be exceeded:
 - Maximum permissible inlet water pressure: 600 KPa (6 Bar)
 - Minimum permissible inlet water pressure: 200 KPa (2 Bar)
 - Maximum inlet water temperature: 40°C
 - Ambient temperature is between +10°C (min.) and +40°C (max.).


Data sheet

FACTS	QUARTZ
Drink selection options	4 Coffee Drinks & Continuous Brewing
Brewing mechanism	Capsule
Capsules supported	Caffitaly, Lavazza
User interface	Capacitive touchpad
Temperature control	PID regulation
Height adjustable outlet	Adjustable from 65 to 110mm
Used capsule drawer capacity	15 capsules
Energy save mode	Yes
Dimension (height, width, depth)	400, 260, 410mm
Internal water tank	1.8 L with water filter option
Minimum inlet water pressure	1 bar
Boiler volume	1,7 L
Power rating (Compliance code)	220-240V IN ~ 1950W 50/60Hz (EAEB-B51C-13AL)
Water connection	1/2" NPT (external) or water tank (internal)
Drip tray	Level viewer & option for drainage connection
Dispenser	Automatic espresso, water/steam manual taps
Ambient noise	< 70 dB
Machine weight	16 kg

Front view

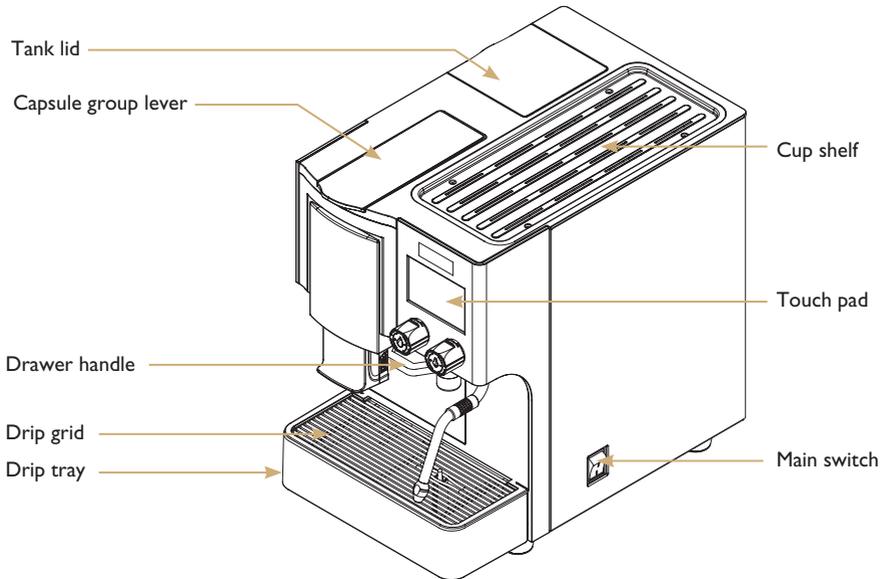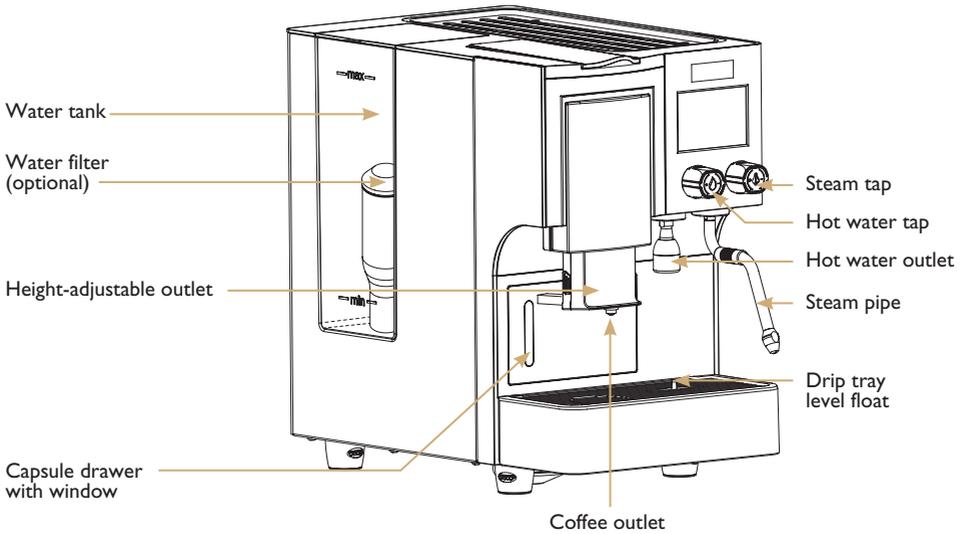

Quartz Classic

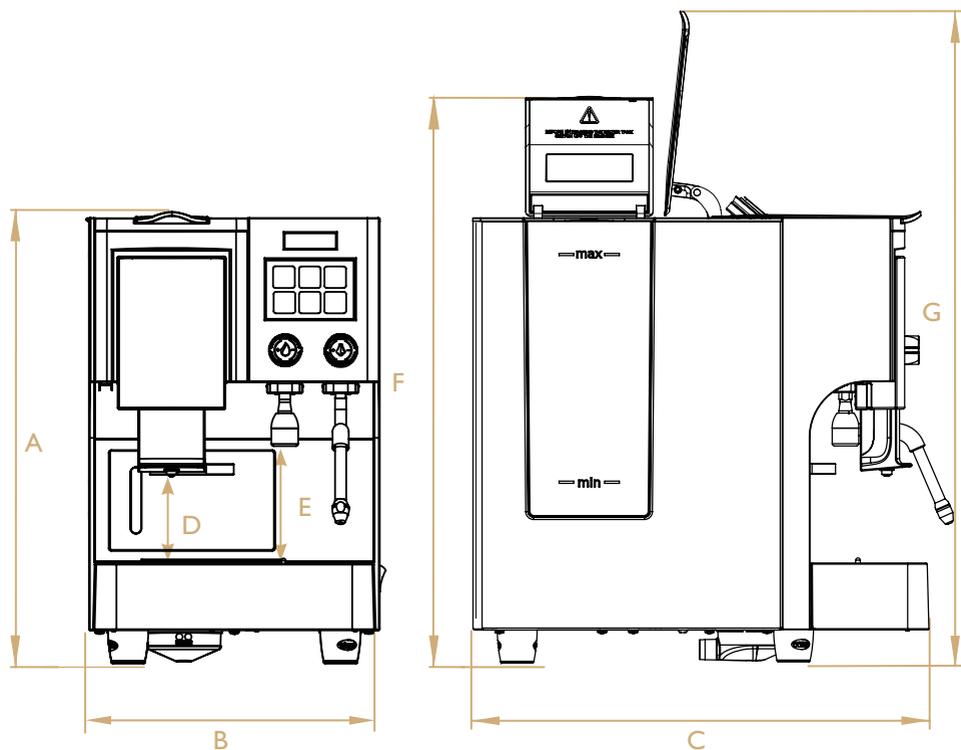

Model	A	B	C	D (Min~ Max)	E	F	G
CLASSIC	400 mm	260 mm	410 mm	65 mm ~ 110 mm	92 mm	510 mm	590 mm

Packaging


- The machine is shipped in a custom-designed carton which utilizes model-specific polystyrene cushions to protect it from damage.
- The machine's carton features standardized handling symbols to explain proper shipping and storage methods.
- The machine must remain in a horizontal position during the transport. Do not store or handle the machine except on its feet.
- During transport protect the carton and machine from impact, drops, crushing, shocks, moisture and exposure to extreme temperature.

Delivery inspection

- Upon receipt and delivery ensure that the machine is in the exact condition described in the enclosed documentation, and that all accessories are included. Missing items should be reported to the manufacturer or dealer immediately.
- Damage caused during transport should be reported to the shipping agent and the machine's distributor immediately.
- Packaging materials are potentially dangerous and should be kept away from children.
- The carton and all packing materials are recyclable and should be returned to a recycling centre for disposal.

INSTALLATION AND START-UP

Positioning

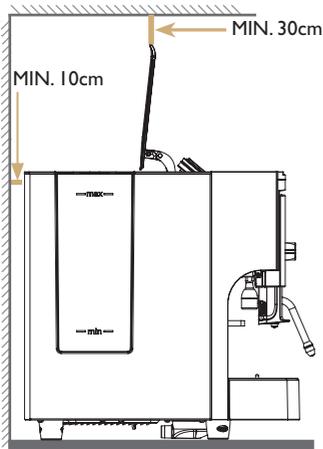

Install within 0-3° horizontal.

- Minimum dimensions for machine placement are 360 mm wide x 510mm depth x 890mm high.
- Position the machine on a flat, stable surface and away from water and heat sources.
- This machine should only be stored and used in a dry environment, since excessive humidity will damage the machine.
- Do not cover the machine with plastic film or rags.



Note:

Leave an air gap of at least 30cm above the machine and 10cm behind it to ensure adequate ventilation. The machine must be installed within 3° of horizontally level front-to-back and side-to-side to ensure proper hydraulic function and drainage. Confirm with a spirit level or digital angle gauge.

Electrical connection



DANGER!

If the power cable or plug is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified person to avoid **SERIOUS INJURY OR DEATH!**

- Verify that the electrical specifications on the nameplate are compatible with the operating conditions of the area where you will install the machine.
- This machine must be connected to a earth grounded wall socket. Ensure that the grounding system is sufficient and confirms with local regulations.
- This machine must be connected to an electrical supply protected by a circuit breaker appropriate for the power consumption of the machine, specified on its nameplate.
- A residual current circuit breaker must be installed in accordance with local regulations.
- Ensure that the power rating of the installation location and the electrical system are suitable for the power demands of the machine.
- Do not use an extension cord, plug adapter or multi-socket device to power this machine.

Water connection

- Connecting the machine to the domestic water supply must performed by a qualified person.
- Run about 20 liters of water from the domestic water supply before connecting the machine to make sure there are no contaminants in the plumbing system.
- Connect the flexible inlet hose (included in the accessory box) to the domestic water supply and tighten it with a wrench. The hose only connects to a 1/2" male connection.
- Only use safe drinking water with a hardness rating between 5 - 8°TH (French hardness degrees) / 2.8 - 4.5°dH (German hardness degrees) / 3.5 - 5.6°e (English hardness degrees) / 50 - 80 ppm (parts per million) of calcium. If the hardness value is below this limit, corrosion of hydraulic components is likely. If the value is higher, lime-scaling inside the boiler will occur. In both cases, the proper function of the machine and quality and taste of the coffee will be negatively affected.
- If you choose to connect the machine to an external water connection, it is strongly recommend to connect the drip tray to an external drain. See page 12 for more information.




Important:

- Only use the hoses supplied with the machine. Never reuse damaged hoses.
- Ensure that the drainage tube is not twisted and that it is below the level of the drain cup.


Pressure and temperature

- Boiler pressure is directly related to water temperature. The chart below demonstrates pressure increase as a result of temperature rise:

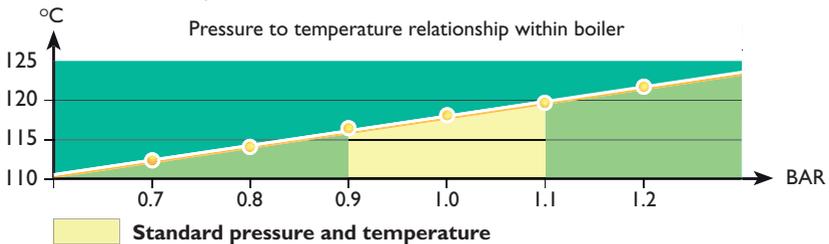


Drip tray drainage


The drip tray can be connected to a plumbing drain, allowing the tray to be emptied much less frequently (a domestic drain connection is required for this). To use this feature, follow the connection procedure explained below.

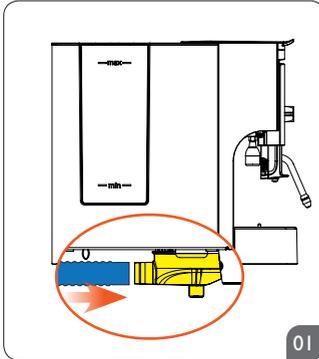


▲ Connect the included corrugated drain tube to the drain cup.

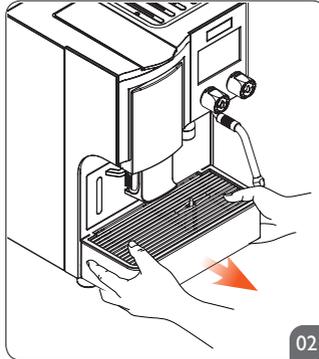

▲ Remove the drip tray.

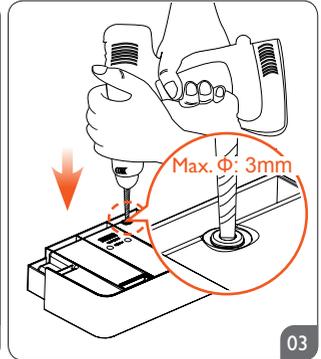

▲ Drill a 3mm hole in the bottom of the drip tray as shown above. Reinstall the drip tray when finished.

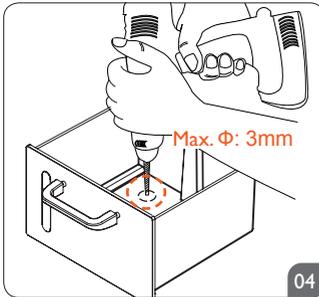

◀ Drill a 3mm hole in the bottom of the capsule box as shown to the left. Reinstall the capsule box when finished.



WARNING!


The holes drilled in the drip tray or capsule box should be $\leq 3\text{mm}$ to avoid leaks.



Note:

The drain pipe system can be used when the machine is connected to either the domestic water supply or the internal water tank.

Starting the machine

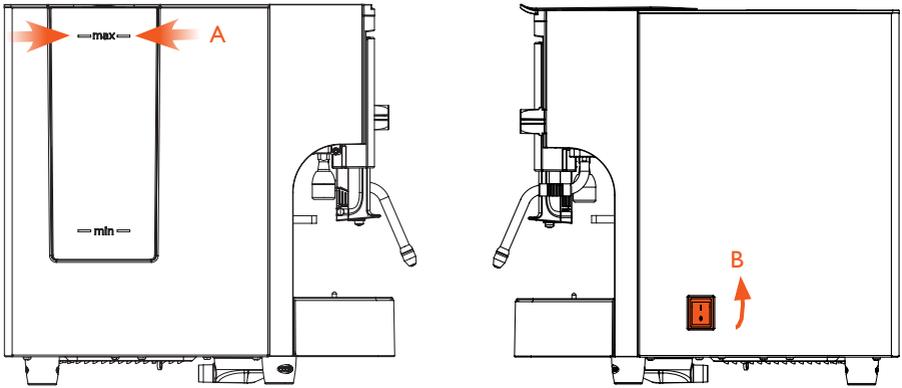

- Fill the water tank to the max level (A).
- If the machine is connected to the domestic water supply, water filling will begin automatically.
- Connect the machine's plug to the electrical outlet (this should be done by a qualified person).
- Turn on the main power switch (B).



Note:

When the machine is switched on, it may automatically go into **STANDBY** mode. To determine if the machine is in **STANDBY** mode, confirm if all of the drink buttons are flashing simultaneously. If this is the case, the machine must be changed to **ON** mode.


To exit **STANDBY** mode and switch to **ON** mode, simply press the K3 and K5 buttons simultaneously for one second.




Note:

Keypad functions and explanations are found on page 22.


How to dispense a drink

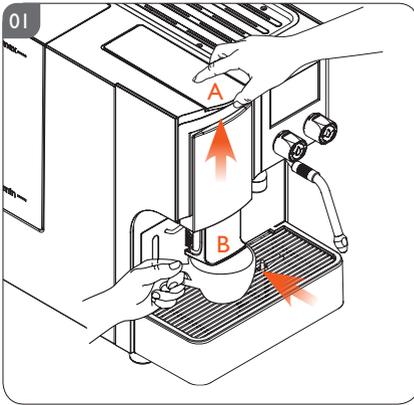


- ▲ Lift the capsule group lever(A) and place a cup centred under the outlet(B).

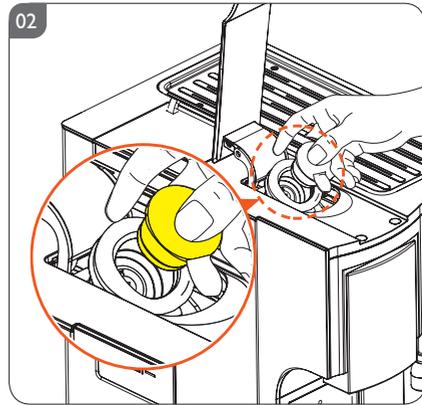

- ▲ Insert a capsule in the capsule group as shown above and push the lever into the locked position.

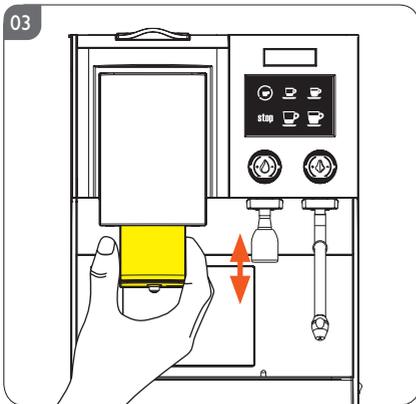

- ▲ Adjust the height of the coffee outlet if necessary. The outlet should be about 1 cm from the top of the cup.

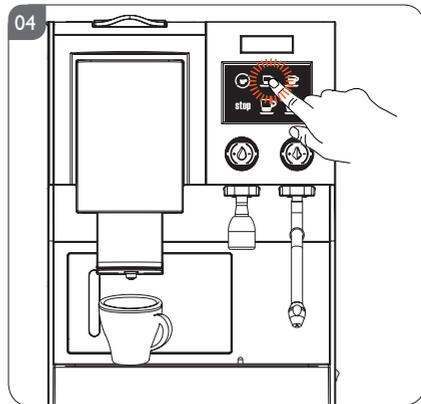

- ▲ Select the desired drink from the keypad. The machine will start automatically.


**WARNING!**

Never open the capsule group while the machine is dispensing a drink, the pressurized hot water and steam could cause scalding or serious injury. After dispensing has finished, wait at least 3 seconds before opening the capsule group.


**Important:**

This machine is only designed for use with the original manufacturer's new capsules. Using mismatched capsules can cause leaking, jamming, or machine damage.

Steaming and frothing milk

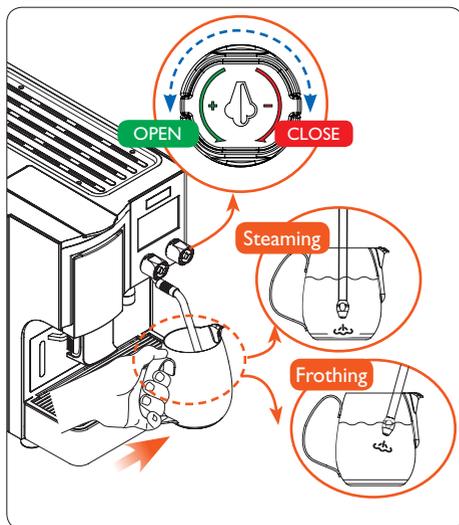**WARNING!**



Never put hands and fingers under the steam nozzle when operating the steam wand to avoid scalding or serious burns.

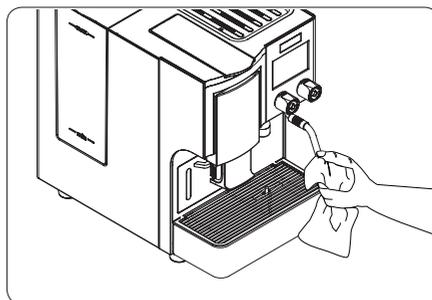

To use the steam wand correctly, proceed as follows:

- Point the steam wand toward the drip tray.
- Slowly open the steam tap for around 2 seconds to flush the steam wand, a small jet of water and steam will emerge.
- Close the steam tap and place the wand into a jug about 2/3 full of milk.
- Ensure the wand tip is covered by the milk, then reopen the steam tap to start steaming or frothing.
- When the milk has reached the desired temperature and consistency close the tap. When steaming has completely stopped, remove the steam wand from the jug.
- Point the wand down towards the drip tray and open the steam tap to flush any excess milk from the wand. Always wipe the steam wand with a clean, damp cloth to avoid tainting the taste of future drinks.


Dispensing hot water

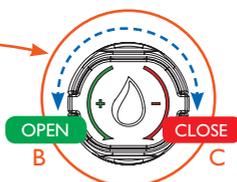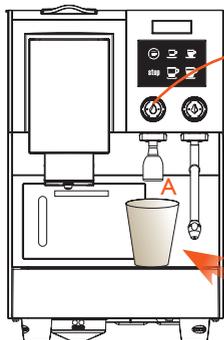


- Place a cup under the hot water outlet.(A)
- Open the water tap (B) to dispense water.
- When the desired volume has been dispensed, close the water tap (C).

Filling the water tank


For machines connected to a tank, if the water level of the tank reaches the minimum level while trying to dispense a drink, the brewing will stop and the keypad will begin to flash. Proceed as follows:

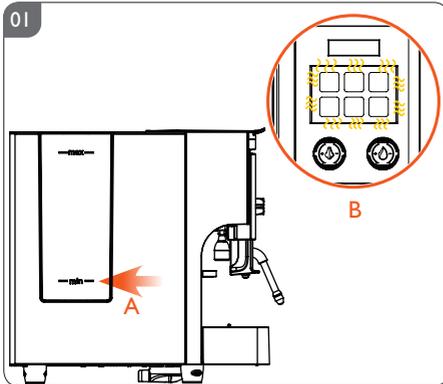


- ▲ If the water level of the tank is below the minimum level(A), all buttons will begin to flash (B).

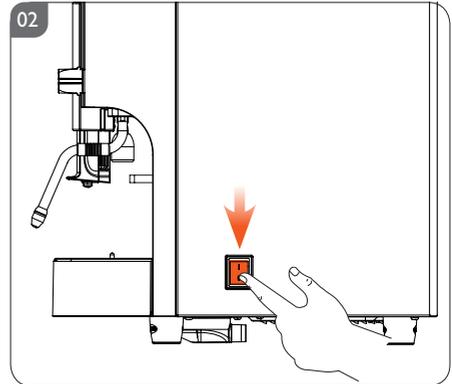

- ▲ Switch off the machine at the power switch.

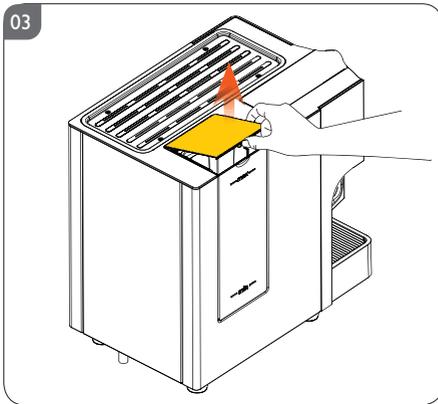

- ▲ Raise the tank lid.

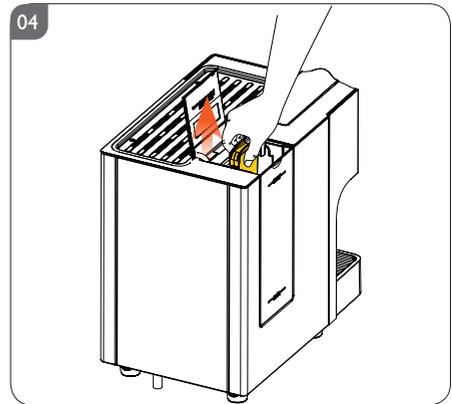

- ▲ Raise up the tank handle, then pull the tank straight up until it is free from the machine. Fill the tank with fresh tap water to the maximum level indication and replace it in the machine.



Important:

Always switch the machine off before removing the tank.

Coffee machine cleaning

**Important:**

- For best efficiency, quality and performance of the machine, always follow the cleaning and care instructions provided in this manual.
- Always turn off the main power switch when cleaning the exterior of the machine.
- All external surfaces should be cleaned with a damp lint-free cloth that will not scratch the machine.
- Do not use aggressive cleaning detergents, solvents or degreasers. These may damage the machine.

**Important:**

Once a day, or 8 hours after dispensing the last coffee, the following cleaning tasks must be performed to maintain the quality and performance of the machine's water system:

- Capsule group flushing: Brew a continuous coffee without a capsule for around one minute.
- Steam wand cleaning: Point the wand down towards the drip tray and open the steam tap for 20 seconds.
- Hot water outlet flushing: Place a container under the water outlet and open the tap for 20 seconds.


Daily cleaning procedures

- Rinse the capsule group with hot water (see page 18).
- Clean the external surfaces of the machine.
- Clean the steam wand and the water tap. Be sure that the nozzles are not blocked or partially blocked with milk residue. If the steam wand must be removed to be cleaned, take care not to deform or damage any of the components.
- Clean the drip tray and the stainless steel grid under running water with a brush.
- If the drip tray is connected to the drain, you can slowly pour one litre of hot water into the drain cup to dissolve and remove coffee residue that may have accumulated inside the drain cup and tubes.


Weekly cleaning procedures

- Clean the capsule group with professional cleaning powder or a cleaning capsule (see page 19).
- Clean the coffee spout (see page 20).


Rinsing the capsule group

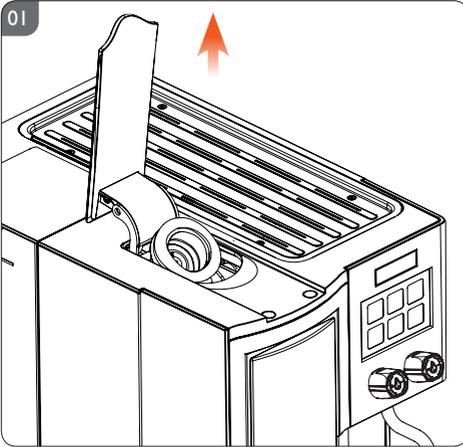


- Raise the capsule lever so that the last used capsule falls into the capsule drawer and the group is empty.

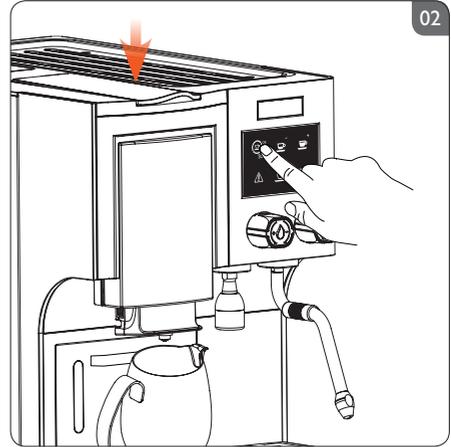

- Lower the lever into the locked position. Press the Continuous button and allow it to run for 30 seconds. Repeat this process 3 times.

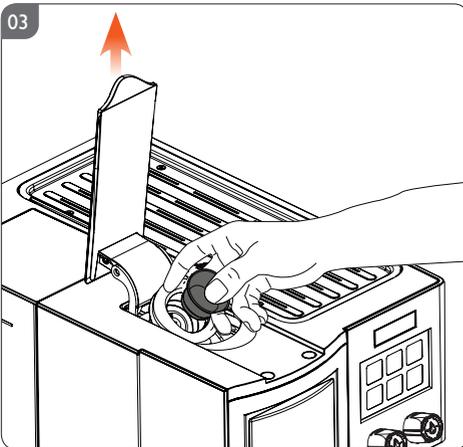

- Reopen the lever and place a clean, empty capsule in the group, then close the lever. (This will rinse the pressure side of the capsule group.)

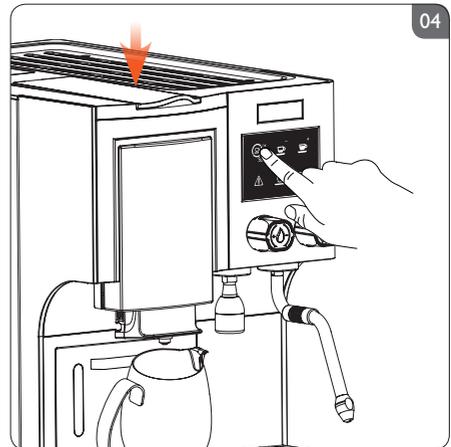


- Lower the lever into the locked position. Press the Continuous button and allow it to run for 30 seconds. Repeat this process 3 times.

**Note:**


A used coffee capsule can be opened up, cellophane cover removed, and used coffee cleaned out for use in steps 3 and 4.

Cleaning the capsule group

Cleaning with powder

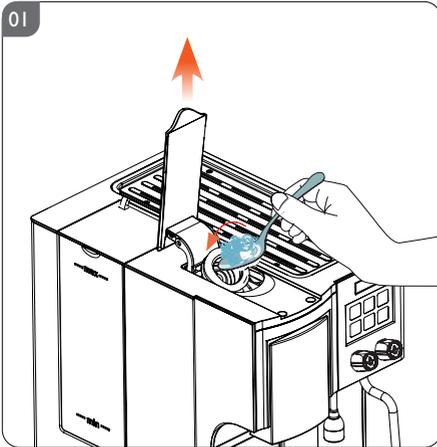


- ▲ Open the lever so the last used capsule falls into the capsule drawer and the group becomes empty. Fill the capsule group halfway with cleaning powder for espresso machines.

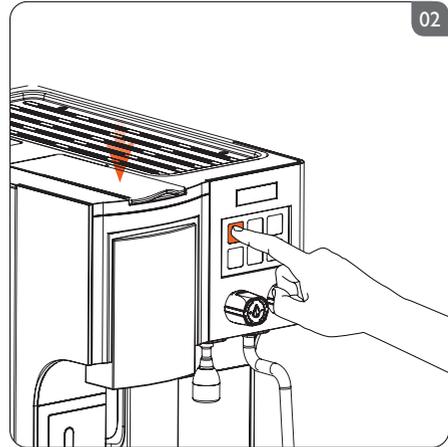

- ▲ Lower the lever into the locked position. Press the Continuous button and allow it to run for 20 seconds. Repeat this process 5 times.

Cleaning with capsule

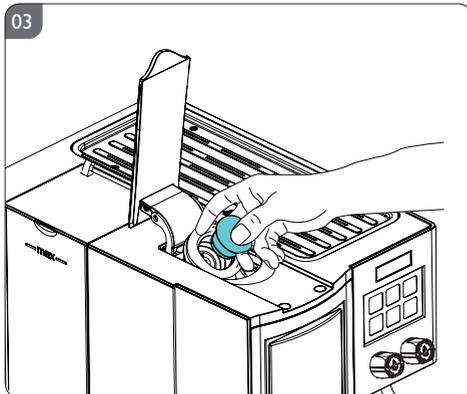

- ▲ Open the lever so the last used capsule falls into the capsule drawer and the group becomes empty. Insert the cleaning capsule in the group and lower the lever into the locked position. Press the Continuous button and allow it to run for 20 seconds. Repeat this process 5 times.

**Note:**

Only use professional cleaning powder for espresso machines. It's available from your distributor.

Part no: 1104162


**Important:**

We recommend to clean and rinse the machine at least once a week.


**Important:**

Always rinse the group after every cleaning procedure.


Cleaning the coffee spout

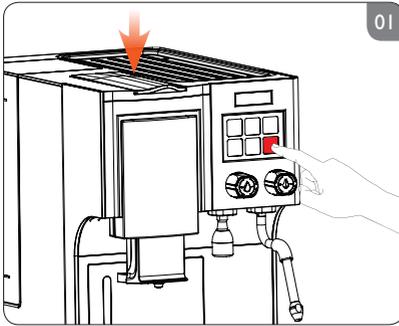

▲ Raise and lower the capsule lever to empty the group, pull the adjustable drink spout down to its lowest position and press the K4 button, then let the brew finish without a capsule.

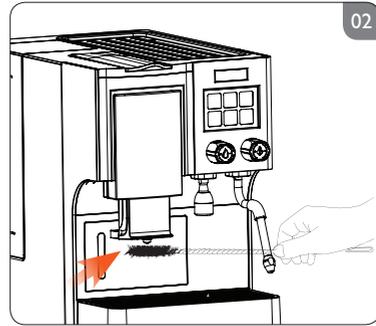

▲ Use the cleaning brush which is included in the accessory box, scrub the coffee spout a few times to remove any buildup of coffee residue.

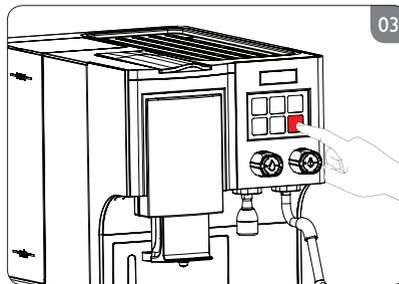

◀ To rinse the spout after cleaning, press the bottom-right side button, then let the brew finish without a capsule. Repeat this process 3 times.




Important:

It is recommended to perform this cleaning daily to keep the machine sanitary and maintain excellent coffee taste.


Emptying the capsule drawer



■ When the capsule drawer is full, the keypad will flash intermittently.

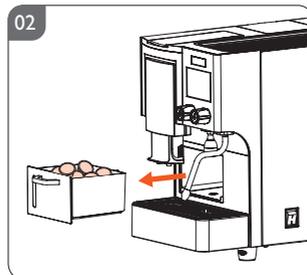


■ Remove the capsule drawer and empty it.

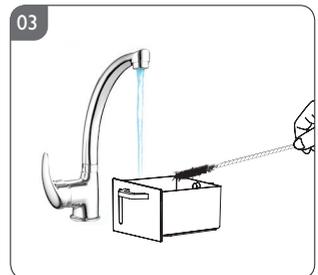

■ Wash the capsule drawer under running water with a brush. Dry before reinstalling, then press STOP to reset the counter.


Additional handling of the machine

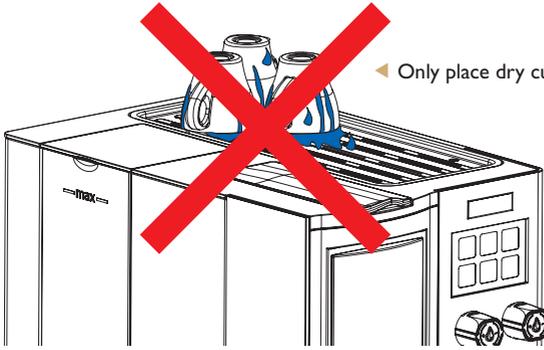


◀ Only place dry cups on the cup shelf.

**Important:**

- ▲ Do not place wet cups on the cup shelf, allowing water to drip into the machine can cause machine damage or failure.

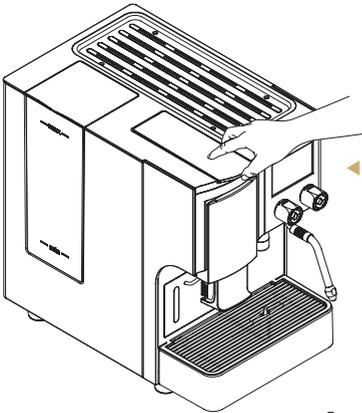

◀ Always raise and lower the capsule lever slowly. Never force it.

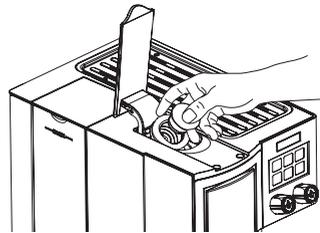


- ▶ The tank must be cleaned at least once a month. Do not use harsh detergent. After cleaning, dry the outside of the tank to avoid getting water inside the machine.



- ▲ To prevent malfunctioning, only use original capsules that the machine is designed for. Do not use other similar capsules, since many appear similar but the sizes differ. The wrong size capsule can cause the machine to leak water or create other problems.

Keypad

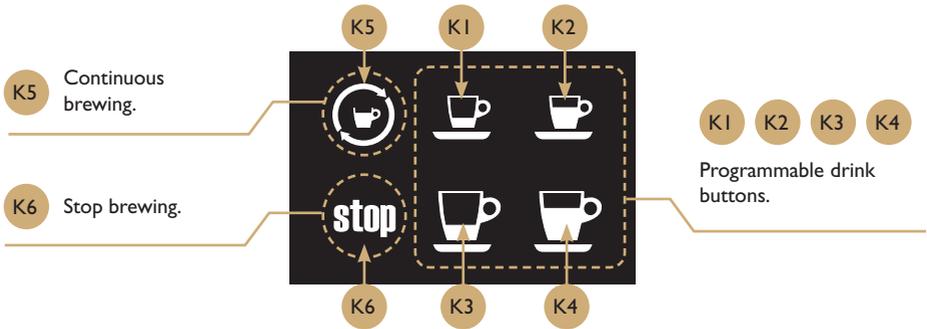

Programming the drink volume

To adjust the drink volume, proceed as follows:

- Insert a new capsule into the group and close it.
- Press and hold the K5 button for five seconds until all the buttons begin to flash.
- With the buttons flashing, press the button of the drink to be programmed (K1, K2, K3, K4). Once pressed, the coffee will start to brew. Watch carefully as the coffee brews and when the desired volume of coffee is reached, press the K6 button once to stop the brew.
- When the brewing stops, the K5 button will flash for five seconds to confirm that the volume has been stored.

Repeat this process for all of the drink button volumes that you want to reprogram (K1, K2, K3, K4). To exit this program simply wait 10 seconds until the display returns to normal function.

**Important:**

Always use a new capsule when programming each new dose.

STANDBY mode

To enter or exit the STANDBY mode, proceed as follows:

- Press and hold the K3 and K5 buttons simultaneously for one second to activate STANDBY mode. When activated, the K3 and K5 buttons will flash intermittently.
- To exit STANDBY mode, press and hold the K3 and K5 buttons simultaneously again for one second.

**Note:**

- STANDBY mode lowers the boiler temperature to save energy during low usage periods.
- To save more energy, particularly overnight, it is recommended to turn the machine off at the main power switch.

Storing the machine

Before storage be sure to:

- Perform all weekly and periodic cleaning procedures described in this manual (see pages 17-21).
- Disconnect and roll up the power cord.
- Disconnect the machine's water inlet hose from the domestic water supply (if applicable) and drain the boiler (this should be performed by a qualified person).
- Clean the drip tray, capsule drawer, and exterior of the machine to remove any coffee or other residue.
- Cover / re-pack the machine in its original carton and store it in a dry place where it will not be exposed to extreme temperatures or humidity.
- When returning the machine to service after long-term storage, perform all weekly and periodic cleaning procedures before use.

Disposal of the machine

Before disposal be sure to:

- Perform all weekly and periodic cleaning procedures described in this manual (see pages 17-21).
- Disconnect and roll up the power cord.
- Disconnect the machine's water inlet hose from the domestic water supply (if applicable) and drain the boiler (this should be performed by a qualified person).
- Pack and send the machine to a certified recycling center.



PROBLEM	POSSIBLE CAUSE	SOLUTION
The machine does not start up.	The plug is not correctly inserted into the socket.	Check that the plug is correctly plugged in and that the socket is working.
The pump can be heard working but the machine does not brew or dispense any coffee.	1.) There is air inside the hydraulic system.	Switch the machine OFF and use the hot water tap to partially empty the boiler and purge the air. Then fill the water tank and switch the machine back ON.
	2.) Something is blocking the hydraulic system.	Call technical support for assistance.
The machine does not automatically stop dispensing coffee at the preset volume.	The flowmeter is not functioning correctly.	Call technical support for assistance.
The coffee's cream/finish is not as high-quality as normal.	The coffee outlet is clogged or dirty.	Clean the coffee spout. (Call technical support for assistance if needed.)
No steam comes out of the steam wand.	The steam nozzle is clogged with milk residue.	Clean the wand and nozzle, if necessary remove the nozzle and clean the holes with a pin or needle.
Water drips from the capsule group.	The group gasket is worn out or damaged.	Replace the group gasket. (Call technical support for assistance if needed.)

ALARM	DESCRIPTION	POSSIBLE CAUSE	SOLUTION
HEATING & FILLING	<p>When the machine is filling with water or heating, all buttons will flash simultaneously in 3 second intervals. It will start to flash from button K5 and continue one by one to button K6.</p> 	The machine is filling with water or heating the boiler.	Wait until the boiler is full and reaches normal operating temperature.
FILLING TIMEOUT	<p>All the lights of the touchpad are flashing and the alarm is sounding.</p> 	<p>The boiler fill time is exceeded because a tube is loose and the machine is leaking water.</p> <p>The boiler fill time is exceeded because there is no water in the tank and boiler.</p>	<p>Turn OFF the machine and contact technical support.</p> <p>Fill the tank and restart the machine (Switch Off and On).</p>
NO WATER IN TANK	<p>All the lights of the touchpad are flashing and the machine doesn't respond.</p> 	There is no water in the tank.	Fill the water tank.
FLOWMETER TIMEOUT	<p>When you make a coffee, the selected drink starts to flash, the STOP button lights up, and the alarm is sounding.</p> 	Coffee powder is too fine.	Change capsule.
DISPENSE TIMEOUT	<p>When you make a coffee, the selected drink starts to flash, the STOP button lights up, and the alarm is sounding.</p> 	<p>Not enough water.</p> <p>There is air inside the hydraulic system.</p>	<p>Fill the water tank.</p> <p>Switch the machine OFF then use the hot water tap to partially empty the boiler. Refill the tank and switch the machine back on.</p>

ALARM	DESCRIPTION	POSSIBLE CAUSE	SOLUTION
STANDBY	Buttons K3 and K5 are flashing and the machine does not respond. 	STANDBY mode is activated.	Press buttons K3 and K5 simultaneously to exit STANDBY mode.
FULL CAPSULE DRAWER	The keypad flashes intermittently, the first row alternating with the second row at one second intervals. 	The capsule drawer is full. The maximum number of capsules has been reached (15 capsules).	Empty the capsule drawer and press the STOP button. The capsule counter will reset to zero and the machine will return to normal operation.
NTC DISCONNECTED OR BROKEN	Buttons K5 and K6 are flashing and the alarm is sounding. 	The NTC is disconnected or broken.	Turn the machine OFF and contact technical support.



For the warranty to be valid the conditions for maintenance must have been followed according to our instructions, proper precautions have been taken, and warranty claim has been issued without delay.

The affected equipment shall not be used while awaiting service if there is any risk that the damage or defect could worsen.

The warranty shall not cover consumable supplies such as glassware, or normal maintenance such as cleaning of filters. Additionally, damages of an external nature, such as contaminants in the water, limescaling, incorrect voltage or power surges, and water supply issues such as pressure changes or service disconnection are not covered by this warranty.

The warranty will not cover damages or defects caused by incorrect handling or operation of the appliance.

ASSEMBLED IN SPAIN BY CREM INTERNATIONAL

TECHNICAL SERVICE

**Please contact your supplier
Your Dealer**

Models covered by this manual:
EAEB-B51C-13AL

